


## ASSEMBLING THE SHARPENING HEAD

### ASSEMBLING

1. Install 4xAAA batteries  
Do not mix old and new batteries.  
Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, ect.) batteries
2. Match the sharpening head with nut as pictured below
3. Pushing the power button, automatically assemble the sharpening head

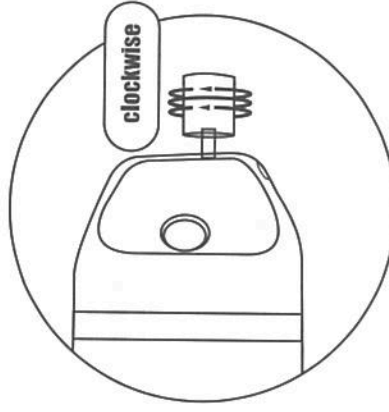


ASSEMBLING

## DISASSEMBLING THE SHARPENING HEAD

### DISASSEMBLING

1. Use the other sharpening head or pin to insert in the hole pictured below to prevent the shaft rotation
2. Turn the head counter clockwise to remove sharpening head

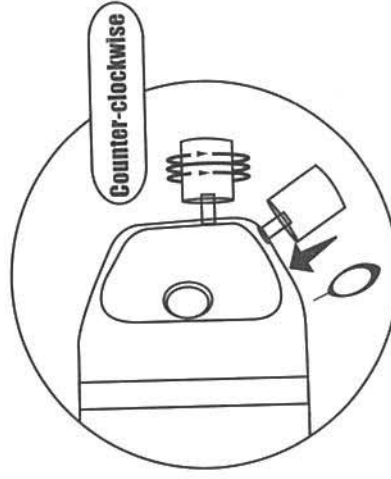

DISASSEMBLING