






## DROP HITCH | Operating Instructions

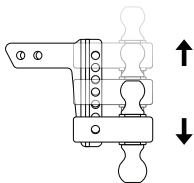


**STEP 1:** Place the Drop Hitch at the desired drop on the drawbar in order to ensure that your vehicle and trailer are properly positioned.

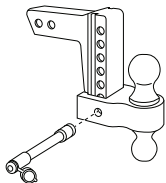

**STEP 2:** Insert the keylock pin into the Drop Hitch when you have achieved the desired position along the drawbar.

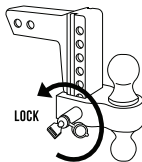

**STEP 3:** To lock the keylock pin in place, turn key counter clockwise. To unlock, turn key clockwise.

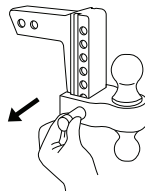

**STEP 4:** Pull keylock pin to ensure that it has been engaged. Do not operate without making sure keylock assemble is securely locked in place.

## IMPORTANT SAFETY INFORMATION

Ensure safety chains are attached between vehicle and trailer. DO NOT attach chains directly to hitch. Do not exceed either the tow vehicle's rated load or your Blackout Drop Hitch capacity rating. Secure your Blackout Drop Hitch to receiver with keylock or hitch pin.



# BLACKOUT

## Ball Mounts & Drop Hitches

*blackout*



BSDH0010

BSDH0011

BSDH0020

BSDH0040

**BALL SIZE**

2"

2"

2" and 2-5/16"

2" and 2-5/16"

**DROP**

2"

4"

2"

0-6"

**RISE**

N/A

N/A

2"

5-1/4"

**TYPE**

Standard

Standard

Reversible

Adjustable

**CAPACITY**

5,000 LBS

6,000 LBS

6,000/7,500 LBS

14,000 LBS

**MATERIAL**

Steel

Steel

Steel

Steel

**CLASS**

Class III

Class III

Class III

Class V



BSDH0030

BSDH0031

BSDH0032

BSDH0033

**BALL SIZE**

2" and 2-5/16"

2" and 2-5/16"

2" and 2-5/16"

2" and 2-5/16"

**DROP**

0-4"

0-6"

0-8"

0-10"

**RISE**

0-4"

0-6"

0-8"

0-10"

**TYPE**

Adjustable

Adjustable

Adjustable

Adjustable

**CAPACITY**

8,000/10,000 LBS

8,000/10,000 LBS

8,000/10,000 LBS

8,000/10,000 LBS

**MATERIAL**

Aluminum

Aluminum

Aluminum

Aluminum

**CLASS**

Class IV

Class IV

Class IV

Class IV