



SIXTEEN ROD CAPACITY LARGE ROLLING ROD RACK

Owner's Manual

Thank you for purchasing a Bass Pro Shops rod/combo storage system. Throughout these assembly instructions, we have included helpful tips to make this assembly process easier.













Tools required:


- Phillips Head Screwdriver
- Rubber Mallet

Assembly Instructions:


Compare your parts to the items in the diagram and parts listing. If you notice that a part is missing, there is no need to return the rack. Please call 1-800-BASS-PRO for a free replacement. Please be ready to provide the model number of the rack and the number or letter of the part from the parts listing to our customer service representative.

- Place **Part 1** face down on a flat surface with the countersunk holes facing down.
- Place (10) wooden dowels (**Part E**) into the recessed holes on **Part 1**.
- Place both pieces of **Part 4** on the dowels (**Part E**) that form an inverted v-shape [see illustration].
- Place both pieces of **Part 3** on the wooden dowels (**Part E**) just above **Part 4**.
- Place **Part 5** on wooden dowels (**Part E**) just above part 3.

①		X2	③		X2
②		X1	④		X2
⑤		X1	A		X12
B		X2	C		X2
D		X12	E		X20
F		X4	G		X4

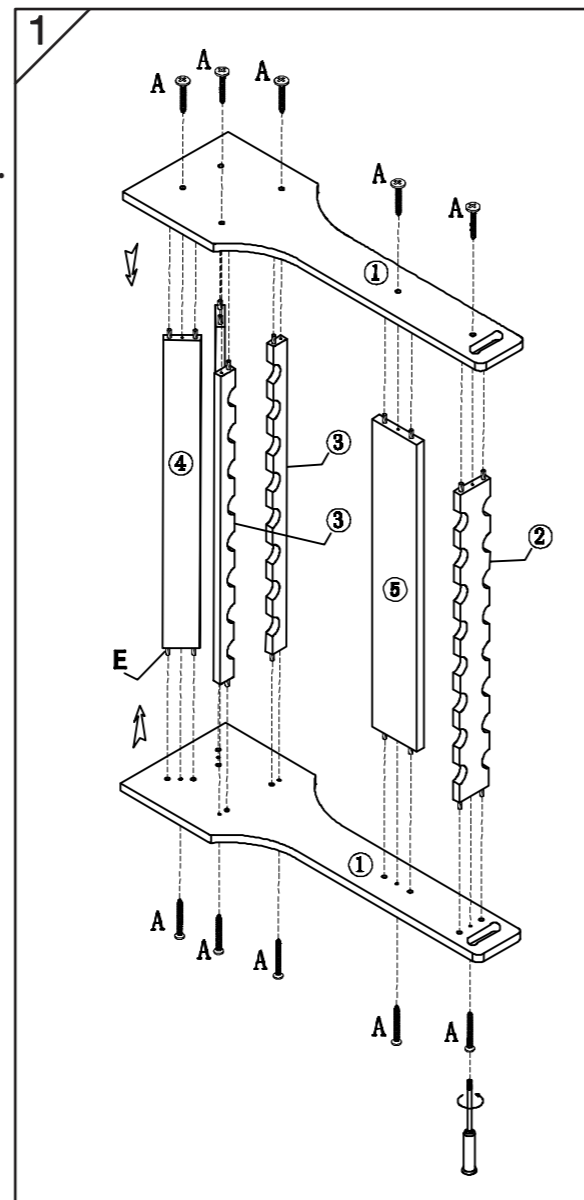

- Place **Part 2** on the narrow end of **Part 1**.
- Place (10) wooden dowels (**Part E**) into the recessed holes on **Part 2, 3, 4 and 5**.
- Place the other section of **Part 1** on top, line up the recessed holes with the exposed dowels (**Part E**), and tap **Part 1** down onto the dowels.
- Insert the brass wood screws (**Part A**) and tighten. *Tip:* Be sure they are lined up with the pre-tapped holes.
- Support the unsecured side of the rack and flip it over. Insert the brass wood screws (**Part A**) and tighten.
- Slide the casters (**Part B and C**) on the flared bottom section of **Part 1** and line up with the holes. Attach using the black bolts (**Part F**) and nuts (**Part G**). Tighten until secure.
- Gently insert wooden plugs (**Part D**) using a rubber mallet.

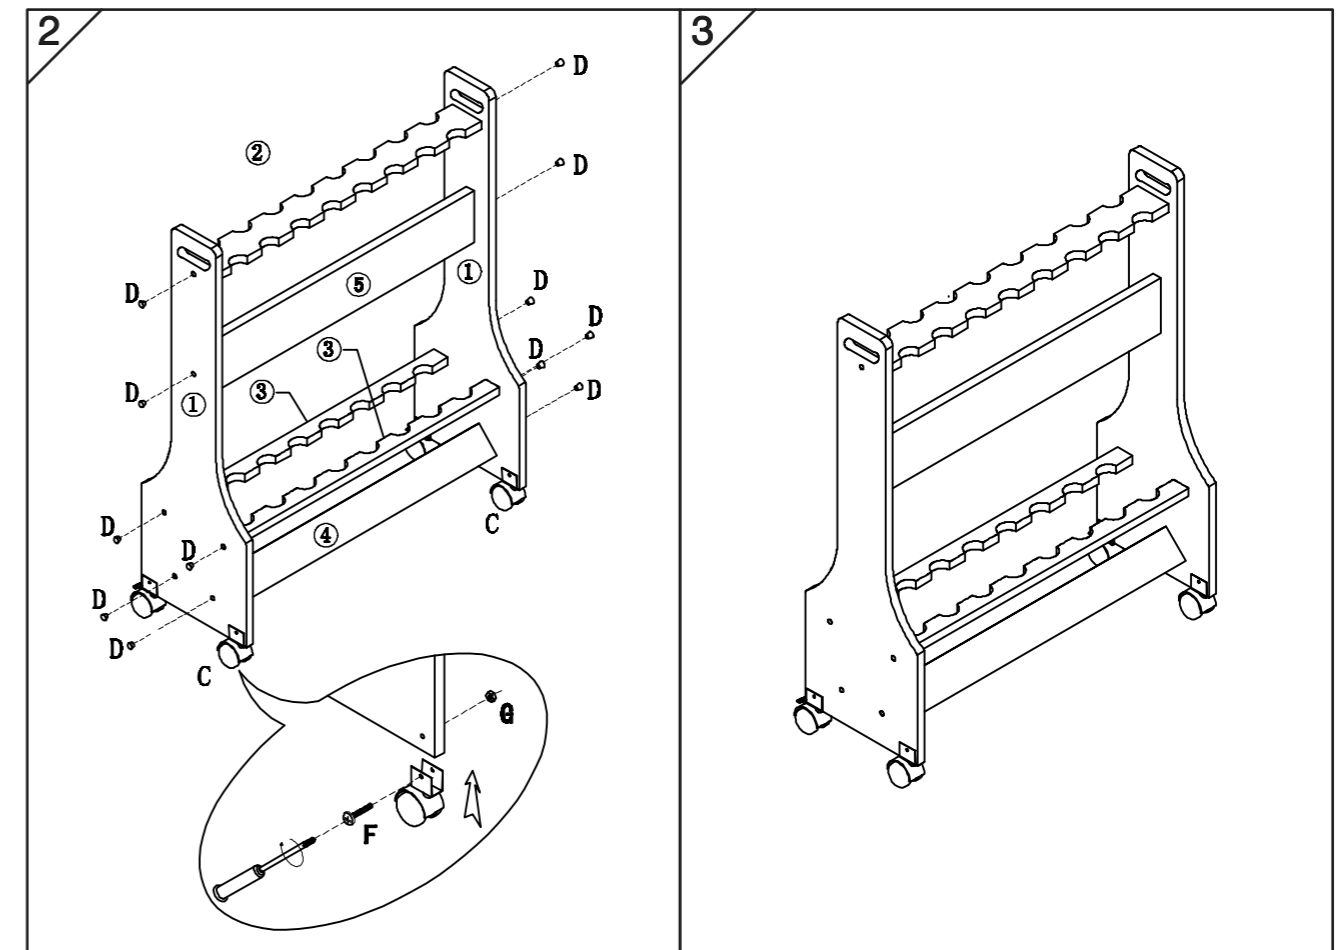

basspro.com
ALWAYS OPEN 24/7

Bass Pro Shops
2500 E. Kearney
Springfield, MO 65898



GRAND PORTE-CANNES ROULANT POUR SEIZE CANNES

Manuel du Propriétaire

Merci pour votre achat du système Bass Pro Shops pour rangement de cannes/combinés. Nous avons inclus des conseils utiles tout au long de ce manuel pour faciliter cet assemblage.

Outils nécessaires :


- Tournevis cruciforme
- Maille en caoutchouc

Instructions d'assemblage :

Comparez vos pièces aux articles sur le schéma et la nomenclature. S'il manque une pièce, il n'est pas nécessaire de renvoyer le porte-cannes. Veuillez bien appeler 1-800-BASS-PRO pour une pièce de remplacement gratuite. Nous vous prions de fournir le numéro de modèle du porte-cannes ou la lettre de la pièce sur la nomenclature au représentant du service à la clientèle.

- Placez la **Pièce 1** tournée vers le bas sur une surface plate avec les trous contrepercés vers le bas.
- Placez (10) chevilles en bois (**Pièce E**) dans les trous en retrait sur la **Pièce 1**.
- Placez les deux parties de la **Pièce 4** sur les chevilles (**Pièce E**) qui forme un V inversé. (Voir l'illustration)
- Placez les deux parties de la **Pièce 4** sur les chevilles (**Pièce E**) qui forme un V inversé. (Voir l'illustration)

①		X2	③		X2
②		X1	④		X2
⑤		X1	A		X12
B		X2	C		X2
D		X12	E		X20
F		X4	G		X4

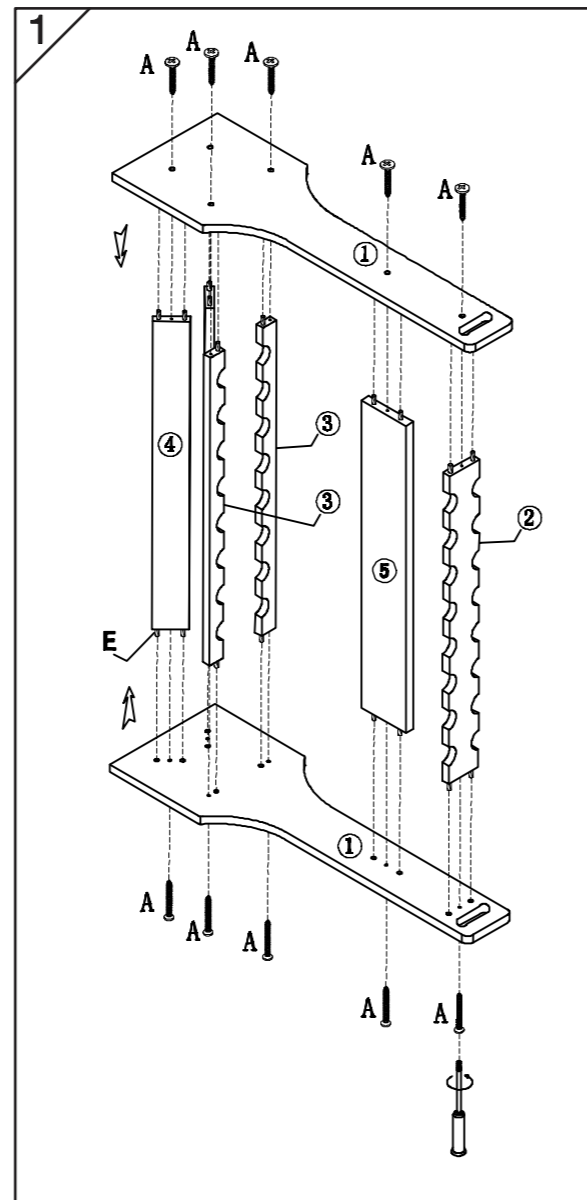

- Placez la (**Pièce 5**) sur les chevilles en bois (**Pièce E**) juste au-dessus de la **Pièce 3**.
- Placez la (**Pièce 2**) sur le bout étroit de la (**Pièce 1**).
- Placez les (10) chevilles en bois (**Pièce E**) dans les trous en retrait des (**Pièces 2, 3, 4 et 5**).
- Placez l'autre section de la (**Pièce 1**) sur le dessus, alignez les trous en retrait avec les chevilles exposées (**Pièce E**), et tapotez sur la (**Pièce 1**) pour l'enfoncer sur les chevilles.
- Insérez les vis à bois (**Pièce A**) en laiton et serrez-les. *Conseil* : Assurez-vous qu'elles soient bien alignées avec les trous pré-percés.
- Supportez le côté non sécurisé du porte-cannes et retournez-le. Insérez les vis à bois en laiton (**Pièce A**) et serrez-les.
- Faites glisser les roulettes (**Pièces B et C**) sur la section à fond évasé de la **Pièce 1** et alignez-les avec les trous. Attachez-les avec les boulons (**Pièce F**) et écrous noirs (**Pièce G**). Serrez bien pour sécuriser.
- Enfoncez doucement les bouchons en bois (**Pièce D**) avec le maillet en caoutchouc.

